



GND must be shared between the board and external 12V power supply.